

Autonics PHOTOELECTRIC SENSOR BJ SERIES MANUAL



Thank you very much for selecting Autonics products.
For your safety, please read the following before using.

Caution for your safety

- Please keep these instructions and review them before using this unit.
- Please observe the cautions that follow:
 - Warning** Serious injury may result if instructions are not followed.
 - Caution** Product may be damaged, or injury may result if instructions are not followed.
- The following is an explanation of the symbols used in the operation manual.
 - Injury or danger** may occur under special conditions.

Warning

- In case of using this unit with machinery which need safety control (Ex:Nuclear power control, medical equipment, vehicle, train, airplane combustion apparatus, entertainment or safety device etc), It requires installing fail-safe device, or contact us for information on type required.
It may cause a fire, human injury or damage to property.
- Do not disassemble or modify this unit. Please contact us if it is required.
It may give an electric shock and cause a fire.

Caution


- This unit shall not be used outdoors.
It might shorten the life cycle of the product or give an electric shock.
- Do not use this unit in place where there is flammable or explosive gas.
It may cause a fire or explosion.
- Please observe the rated specifications.
It may shorten the life cycle or damage to the product.
- Do not use this unit beyond rating power and do not supply AC power at DC power type.
It may result in damage to this unit.
- Please check the polarity of power and wrong wiring.
It may result in damage to this unit.
- In case of free voltage type, do not use the load beyond rated switching capacity of Relay contact.
It may cause insulation failure, contact melt, contact failure, relay broken, fire etc.
- Do not use this unit in place where there is vibration or impact.
It may result in damage to this unit.
- In cleaning the unit, do not use water or an oil-based detergent.
It might cause an electric shock or fire that will result in damage to the product.

Ordering Information

BJ 15 M - T D T - □	
□	NPN open collector output
P	PNP open collector output
T	Solid-state output(TR)
D	DC power
T	Transmitted beam
P	Polarized retroreflective
D	Diffuse reflective
	Sensing distance unit : mm
M	Sensing distance unit : m
	Number Sensing distance
BJ	Series name

*The above specification is changeable at anytime without notice.


Dimensions

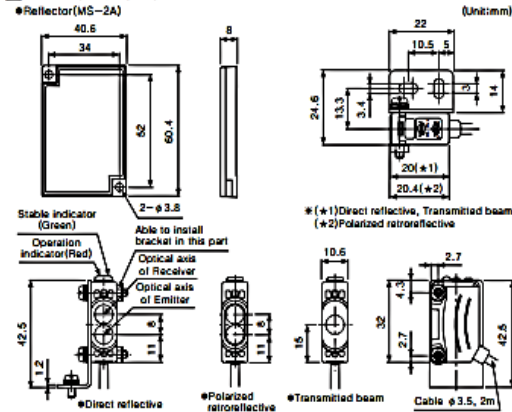


Specifications

Model	BJ15M-TDT		BJ10M-TDT		BJ3M-PDT		BJ1M-DDT		BJ300-DDT		BJ100-DDT	
	BJ15M-TDT-P	BJ10M-TDT-P	BJ3M-PDT-P	BJ1M-DDT-P	BJ300-DDT-P	BJ100-DDT-P						
Sensing type	Transmitted beam		Polarized retroreflective		Direct reflective							
Power supply	12-24VDC ±10% (Ripple P-P: Max. 10%)											
Power consumption	Emitter: Max. 20mA, Receiver: Max. 20mA											
Sensing target	Opaque materials of Min. φ12mm		Opaque materials of min. φ75mm		Non-glossy white paper 300×300mm		Non-glossy white paper 0-1m		Non-glossy white paper 100×100mm			
Sensing distance	0-15m		0-10m		0.1-3m (MS-2A)		0-1m		0-300m		0-100m	
Hysteresis	Max. 20% at sensing distance											
Light source / Wavelength	Infrared LED / 850nm		Red LED / 660nm		Infrared LED / 850nm		Red LED / 660nm		Infrared LED / 850nm			
Control output	NPN or PNP Open collector type + Load voltage : Max. 25.4VDC + Load current : Max. 100mA + Residual voltage = NPN / Max. 1V, PNP / Min. (Power voltage - 2.5V) + Light ON/Dark ON Selection (Short rotor volume)											
Operation mode	Light ON/Dark ON											
Protection circuit	Reverse polarity protection, Short-circuit protection, Inference prevention function											
Response time	Max. 1ms											
Sensitivity adjustment	Short rotor volume (210°)											
Ambient illumination	Sunlight : Max. 11,000lx, Incandescent lamp : Max. 3,000lx											
Ambient temperature	Operation: -25-55°C, Storage: -40-70°C (non-dew condition)											
Ambient humidity	Operation & Storage: 35-85%RH (non-dew condition)											
Insulation resistance	Min. 20MΩ (500VDC)											
Dielectric strength	1000VAC 50/60Hz for 1 minute											
Vibration	1.5mm amplitude at frequency of 10-55Hz in each of X, Y, Z directions for 2 hours											
Shock	500m/s ² in X, Y, Z directions for 3 times											
Protection	IP67 (IEC standard)											
Connection	Outgoing cable											
Indicator	Operation indicator: Red, Stable indicator: Green (Emitter of power indicator for transmitted beam: Red)											
Material	Case : PC+ABS, Lens : PMMA, LED CAP : PC											
Cable	φ3.5mm, 3P, Length: 2m (Emitter of transmitted beam type: φ3.5mm, 2P, Length: 2m)											
Accessory	Individual : Reflector (MS-2A) Common : Mounting bracket, Bolt, Driver											
Unit weight	Approx. 90g		Approx. 60g		Approx. 45g							

Control output circuit diagram

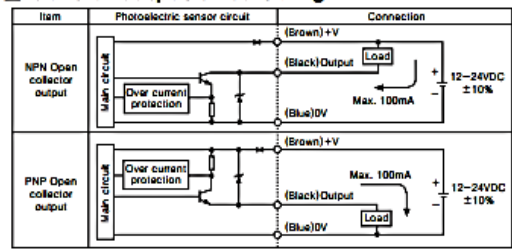


Connections

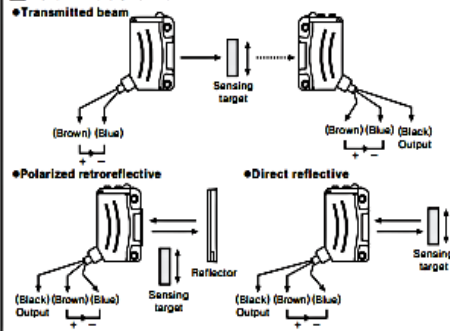


Operation mode

Operation mode	Light ON mode	Dark ON mode
Receiver	Received light Interrupted light	
Operation indicator (Red LED)	ON OFF	
TR Output	ON OFF	


Operation timing diagram

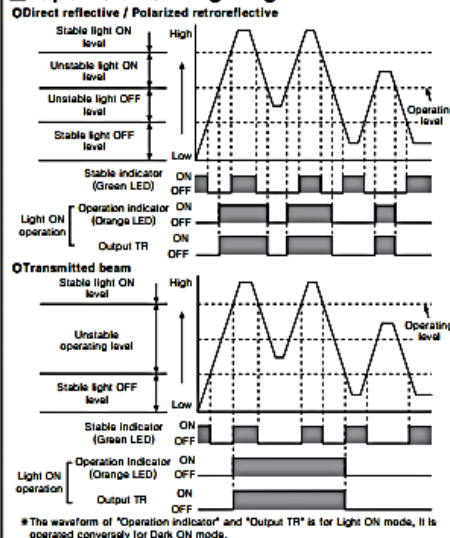

Mounting & Adjustment

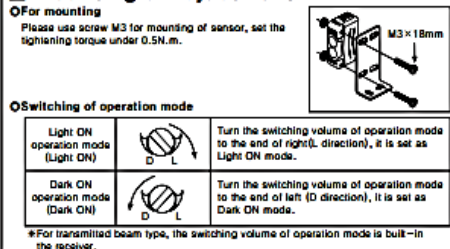


Optical axis adjustment

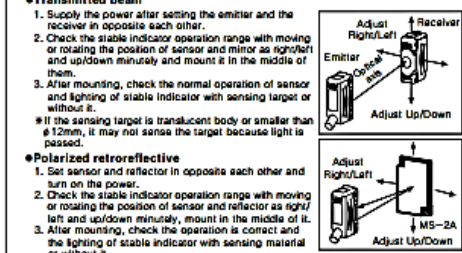

Sensitivity adjustment


Order	Sensitivity adjuster	Description
1	(A)	Turn the sensitivity adjuster to the right from min. sensitivity position and check (A) where the indicator is turned on in "Light ON status".
2	(A) (B) (C)	Turn the sensitivity adjuster more to the right from min. sensitivity position, check (B) where the indicator is turned on and turn the adjuster to the left, check (C) where the indicator is turned off in "Dark ON status". * If the indicator is not lighted although the adjuster is turned to the max. position, the max. position is (C).
3	(A) (B) (C)	Set the separator at the center of (A) and (C). Also setting of the optimum sensitivity, check the operation is correct and lighting of stable indicator with sensing target or without it. If the indicator is not lighted, please check the sensing method again because sensitivity is unstable.

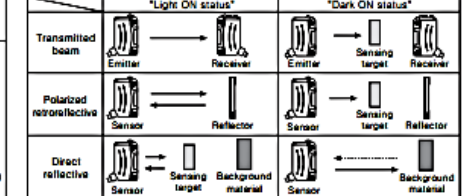

*Please set adjuster as sensitivity adjustment is executed in stable Light ON area and the reliability of environment (temperature, supply, dust etc) is increased after the mounting it in a stable area.
*It may cause breakdown when the sensitivity and operation mode conversion adjuster is turned by force.

Caution for using

- The sensor will be in a detectable status within 500ms after supplying the power.
If the power line of the load and the sensor is different, you must supply power voltage to the sensor first.
- Shade a strong source of light as like sunlight, spotlight not to be lit in the inclination angle of photoelectric sensor directly.
- The photoelectric sensor may cause malfunction under the fluorescent lamp light, be sure to use the cover or the shutter to shade the light.
- When more than 2 sets of transmitted beam type sensors are used closely, it might cause interference each other. Be sure to put enough space between them in order to avoid malfunction.
- If photoelectric sensor is installed at flat part, it might cause malfunction by reflection light from flat part. Be sure to put space between photoelectric sensor and ground.
- When wiring the photoelectric sensor with high voltage line, power line in the same conduit, it may cause malfunction or mechanical problem, please do wire separately.
- Avoid installing the unit in place with corrosive gas, oil or dust, strong flux, noise, sunlight, strong alkali, acid.
- In case of connecting relay as inductive load to output, please remove surges by using diode or varistor.
- The photoelectric sensor cable shall be used as short as possible, because it may cause malfunction by noise through the cable.
- When it is stained by dirt at lens, please clean the lens with dry cloth, do not use an organic materials such as alkali, acid, chromic acid.
- When switching power supply as the source of supplying power, F.G terminal shall be grounded and a condenser for removing noise shall be installed between OV and F.G terminal.

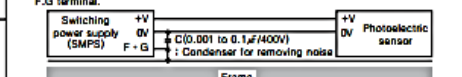

*It may cause malfunction if above instructions are not followed.

Major products

- PROXIMITY SENSOR
- PHOTOELECTRIC SENSOR
- AREA SENSOR
- FIBER OPTIC SENSOR
- DOOR/DOOR SIDE SENSOR
- PRESSURE SENSOR
- ROTARY ENCODER
- COUNTER
- TIMER
- TEMPERATURE CONTROLLER
- TEMPERATURE/HUMIDITY TRANSDUCER
- POWER CONTROLLER
- PANEL METER
- TACHYLINE SPEED/PULSE METER
- DISPLAY UNIT
- SENSOR CONTROLLER
- SWITCHING POWER SUPPLY
- GRAPHIC PANEL
- STEPPING MOTOR & DRIVER & CONTROLLER
- LASER MARKING SYSTEM(CO₂, Nd:YAG)



Autonics Corporation
http://www.autonics.com
Global Partner for IA